

228 Old London Road  
Marks Tey  
Colchester  
Essex CO6 1HD  
+44 (0)1206 211666  
[info@smithfongbamboo.co.uk](mailto:info@smithfongbamboo.co.uk)

## INSTALLATION GUIDE



**Dex**<sup>TM</sup>  
by Smith & Fong



Build your platform with 400mm spacers



Lay out boards to check spacing first.



Place first plank (header board) on most obvious corner to start. Let the board hang over the frame a bit to trim later.



Pre-drill with a 4mm bit and counter sink screw into header board every 40 to 60 cm using 50mm drive screws.



At header board, insert a clip in slot and partially drive screw until it just touches top of clip.




Clips should be level – do not over tighten.



Double deck clips should be used at board seams. Single deck clips where there are no board seams.



Add the clips and screw partially for next row.

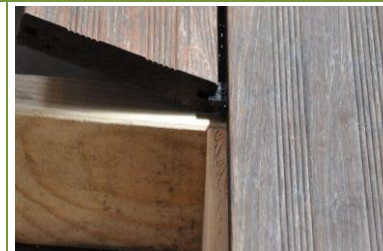


Angle the next board onto the partially screwed clip. Complete the row.



Lay each row by row



Place all boards in the row before tightening screws.

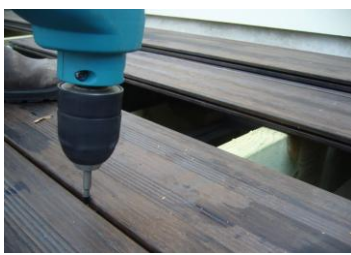

Screw clips tight once the lead board has been placed. Clips get tightened row by row.



Repeat procedure until the deck is finished. Pre -drill and screw the last board, as you did the first



To maintain it's deep colouration we recommend that you regularly oil or seal your deck.



Oil repelling water.